



Installation and Operating Instructions

Variable area flow meter

RA 65 / FA 65



Kirchner und Tochter



Contents

1. Foreword..... 3

2. Safety..... 3

 2.1. Symbol and meaning..... 3

 2.2. General safety directions and exemption from liability..... 3

 2.3. Intended use 3

 2.4. Special safety instructions concerning glass devices 4

 2.5. Operator and operating personnel 4

 2.6. Regulations and guidelines 4

 2.7. Notice as required by the hazardous materials directive 4

3. Transport and storage..... 4

4. Installation 5

 4.1. Installation RA 65..... 6

 4.2. Installation FA 65 6

5. Start-up..... 6

6. Readings in operation..... 6

7. Limit contacts MSK-1, MSK-12, MSK-W 7

 7.1. Connection of limit contacts..... 7

 7.2. Setting the limit contacts..... 7

8. Maintenance and cleaning of the flow meter..... 8

 8.1. Dismantling and installation 8

 8.2. Replacement of measuring glass..... 8

9. Service 9

 9.1. Disposal..... 9

10. Technical data 10

 10.1. Materials 10

 10.2. Dimensions..... 11

 10.3. Technical data of limit contacts..... 13

 10.3.1. Low-Voltage Directive..... 13



1. Foreword

These Installation and Operating Instructions are applicable to devices of Series RA 65 and FA 65. Please follow all instructions and information given for installation, operation, inspection and maintenance. The Instructions form a component part of the device, and should be kept in an appropriate place accessible to the personnel in the vicinity of the location. Where various plant components are operated together, the operating instructions pertaining to the other devices should also be observed.

2. Safety

2.1. Symbol and meaning



Safety notice

This symbol is placed against all directions/information relating to occupational health and safety in these Installation and Operating Instructions, and draws attention to danger to life and limb. Such notices should be strictly observed.

2.2. General safety directions and exemption from liability

This document contains basic instructions for the installation, operation, inspection and maintenance of the variable-area flow meter. Failure to comply with these instructions can lead to hazardous situations for Man and Beast and also to damage to property, for which Kirchner und Tochter disclaims all liability.

The Operator is required to rule out potentially hazardous situations through voltage and released media energy.

2.3. Intended use

The RA 65/FA 65 Series device is a variable-area flow meter for liquids and gases. It is designed for installation in vertical pipe runs. Installation in the pipeline should be carried out solely in accordance with these Instructions. The required version of the variable-area flowmeter should be selected on the basis of the pipe diameter at the installation location of the device. The limit values pertaining to the device are specified in Section 10 and must be complied with. Any modifications or other alterations to the measuring device may be carried out solely by Kirchner und Tochter. Installation in horizontal pipe runs is possible using appropriate pipe bends. The direction of flow must always be from bottom to top. Details of the process product together with the operating conditions are marked on the measuring glass.



2.4. Special safety instructions concerning glass devices



For safety reasons, we recommend fitting a protective shield in front of the measuring tube when starting up flow meters fitted with glass measuring tubes. The devices should not be operated where there is a risk of pressure surges (water hammer)!

To avoid glass breakage, all fitting work between measuring glass and heads inside the glass should be carried out by twisting and simultaneously pressing after having wetted the packing rings/gaskets.

2.5. Operator and operating personnel

Authorized installation, operating, inspection and maintenance personnel should be suitably qualified for the jobs assigned to them, and should receive appropriate training and instruction.

2.6. Regulations and guidelines

In addition to the directions given in these Installation and Operating Instructions, observe the regulations, guidelines and standards, such as DIN EN, and, for specific applications, the codes of practice issued by DVGW (gas and water) and VdS (underwriters), or the equivalent national codes, and applicable national accident prevention regulations.

2.7. Notice as required by the hazardous materials directive

In accordance with the law concerning handling of waste (critical waste) and the hazardous materials directive (general duty to protect), we would point out that all flow meters returned to Kirchner und Tochter for repair are required to be free from any and all hazardous substances (alkaline solutions, acids, solvents, etc.).



Make sure that devices are thoroughly rinsed out to neutralize hazardous substances.

3. Transport and storage

Always use the original packing for transport, handling and storage. Protect the device against rough handling, impact, jolts, etc.




4. Installation

Variable-area flow meters are suitable only for vertical installation, with the direction of flow being from bottom to top. For all other installation situations, appropriate pipe bends need to be fitted in the existing pipeline in order to ensure upward vertical flow through the device. Before installing, remove all protective caps, transport locks and any foreign bodies found. Make sure the pipes are correctly spaced and in true alignment at the installation location of the flow meter. For Type RA 65, additionally fit pipe unions to both open ends of the pipeline before installing the flow meter.

Straight unimpeded pipe runs upstream and downstream of the meter's installation location should each have a length equal to $5 \times DN$ (= meter size). Any control equipment, particularly in the case of gaseous media, should always be located downstream of the flow meter.

The type FA 65 flow meter is sealed off from the pipeline by gaskets. After it has been installed, the flow meter should not be turned any more. Avoid drawing the ends of the pipelines together and do not tighten down the device excessively.

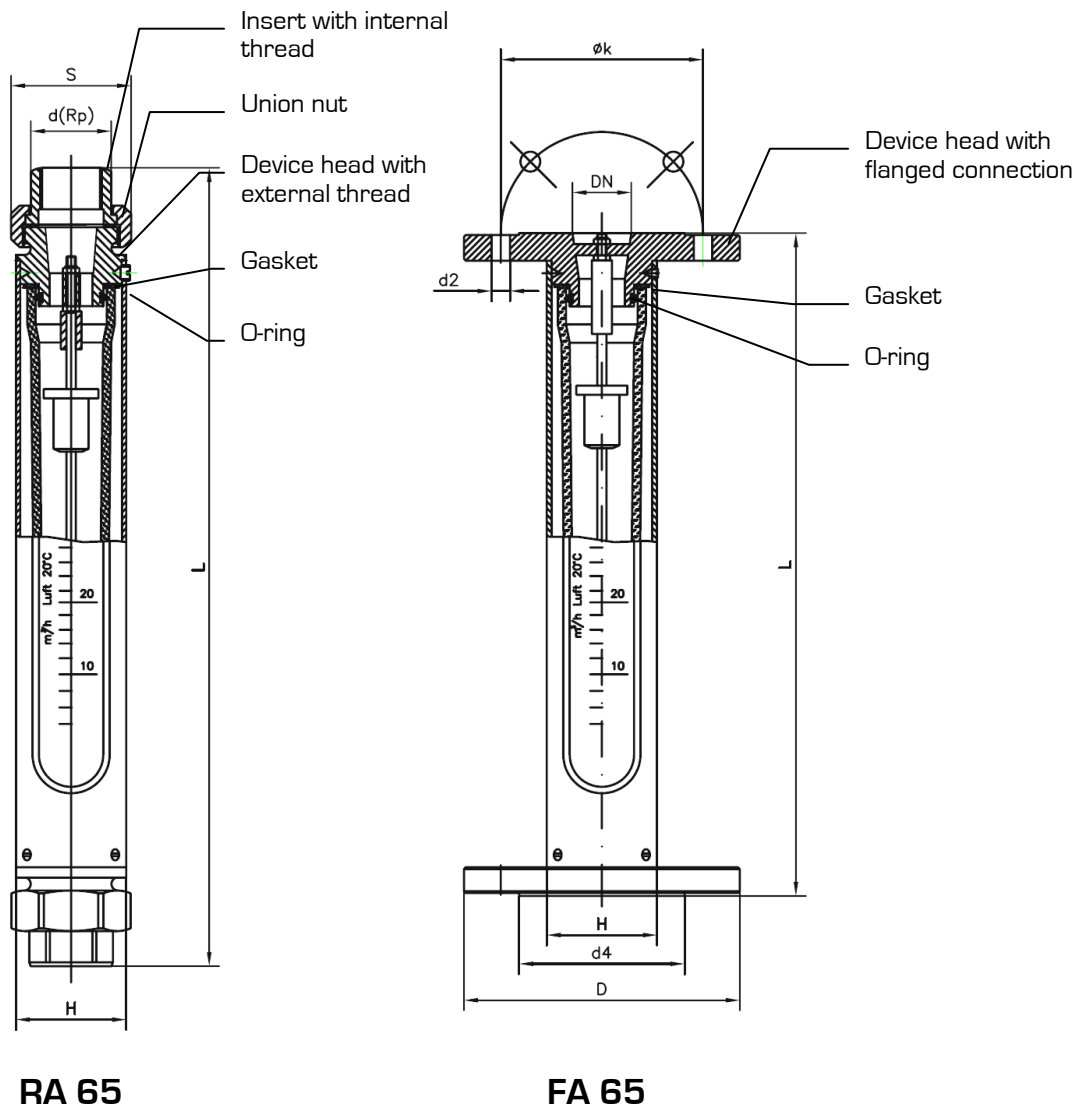



4.1. Installation RA 65

- Dismantle the inserts and the union nuts from the device.
- Slip the union nuts over the ends of the pipeline at the installation point.
- Screw the inserts on to the pipe ends together with packing material.
- Slide the device with the gaskets (not included with the flow meter) at both ends into the installation point.
- Screw the union nuts back on to the device heads and tighten them down such that the device is seated in the pipeline without stresses.

4.2. Installation FA 65

- Slide the device together with the gaskets (not included with flow meter) at both ends into the installation point.
- Check that the gaskets are in alignment and make sure they do not project into the pipeline.
- Attach bolts and nuts loosely to the flanged connection.
- Tighten bolts on the flanged connection in diagonally opposed sequence so that the device is fastened in the pipeline without stresses.

5. Start-up

The flow meter must have been properly installed before it is started up.

- Test all device connections.
- To set the flow: pressurize the pipelines by slowly opening the shut-off valves. On liquid service: carefully evacuate the pipeline.
- Check that all components are leak-tight and, if necessary, tighten down threaded joints and screw connections.

6. Readings in operation

The flow value is read off from the scale on the glass cone at the top edge of the float. The measured-value readings are only correct when the operating condition at the measuring point (flowing medium, operating pressure and temperature) corresponds to the values marked on the measuring glass. If operating conditions should differ, the measured value must be corrected with the aid of the general float equation, which you will find in our technical documents.

You can also do the recalculation with the help of our conversion program given on our home page: www.kt-web.de, Section "Physical Basics".



7. Limit contacts MSK-1, MSK-12, MSK-W

The flow meter can be equipped with limit contacts to provide local indication with monitoring function:

- MSK-1 normally closed contact
- MSK-12 normally open contact
- MSK-W change over contact

The limit contacts consist of a limit contact (reed switch) that is switched over by the magnet integrated in the float. The limit contact is guided in a guide slot in the protective case and can be adjusted over the full measuring range. The reed contacts have a bistable characteristic.

Uncontrolled current and voltage peaks can occur in the case of inductive or capacitive loads, e.g. from contactors or solenoid valves. Such peaks will also occur, depending on cable geometry, where cables exceed a certain length.

We therefore recommend using an MSR contact protection relay, which is additionally available. This will increase the contact rating and prevent occurrence of inductive and capacitive peaks, thus ensuring long service life of the contacts.

Electrical data and limit values are specified in Section 10.2.

7.1. Connection of limit contacts



- Electrical connection of the device must be carried out in conformity with the relevant VDE regulations (or equivalent national standards) and in accordance with the regulations issued by the local power supply utility.
- Disconnect the plant from supply before connecting the limit contact.
- Provide a protective circuit for the contacts in keeping with their capacity.
- Connect line-side fuse elements matched to consumption.
- Connect the cable using the supplied right-angle plug. Assigned are terminals 1 and 2. Earth and terminal 3 are not assigned. The circuit diagram for limit contacts is shown in the Technical Data, Section 10.1 on page 12.

7.2. Setting the limit contacts

- Loosen the lock nut M10 on the neck of the contact.
- Slide the contact to the flow value required to be monitored.
- Test the switching characteristic by moving the float over and beyond the switching position.
- Retighten the lock nut.



8. Maintenance and cleaning of the flow meter

The device is maintenance-free. Should the glass cone become fouled, the device can be removed from the pipeline as follows.

8.1. Dismantling and installation

Remove the flow meter out of the system by detaching the union nuts or, as the case may be, the screw connections and/or pipe unions. After dismantling the upper head (detach the radial retaining screw), remove the measuring glass from the device and clean the individual parts. Reassemble in reverse order. Pay special attention to correct installation of the appropriate gaskets and the float stops. Before installing, inspect all gaskets (see Figure on page 5) for signs of damage, and replace if necessary.

8.2. Replacement of measuring glass

Refer to Figure on page 5.

1. Remove the device from the installation point. Detach the lateral retaining screws and remove the device heads by simultaneously twisting and pulling them out of the glass. On devices with a guide rod, leave the rod mounted on the upper head!
2. On devices with non-guided floats, remove the float stops and the float from the old glass and insert them into the new glass. Carefully screw the float stops (helical springs made of VA steel) using pliers into the ends of the glass (risk of glass breakage!).
3. Fit the device heads with new O-rings and gaskets.
4. Wet the O-ring before assembling glass and head.
5. Carefully slide the lower device head into the bottom opening of the measuring glass, twisting and pushing simultaneously (risk of glass breakage!).
6. Insert the glass with head into the case, making sure not to knock the glass against the case.
7. Fasten the device head with the retaining screws to the case.
8. Align the glass cone so that the inscriptions can be read through the viewing window on the case.
9. Slide the second head with wetted O-ring by twisting and pushing it simultaneously into the upper opening of the measuring glass, or steel case, as the case may be. Also lock the head in place on the case.
10. On devices with guide rod, check float mobility. If necessary, correct the position by turning the guide rod (to do this, hold the plain end of the guide rod at the lower head with a pair of engineer's pliers, or similar, and slightly loosen the M5 screw at the opposite end).
11. Reinstall the device in the installation point.



9. Service

All devices with defects or deficiencies should be sent direct to our repair department. To enable our customer service facility to deal with complaints and repairs as quickly as possible, you are kindly requested to coordinate the return of devices with our sales department, Tel. +49 (0) 2065-96090.

9.1. Disposal

Please help to protect our environment, and dispose of workpieces in conformity with current regulations or use them for some other purpose.



10. Technical data

Nominal pressure rating	FA 65: PN 10 at 20 °C RA 65: PN 10 at 20 °C
Max. operating pressure	10 bar at 20°C for diameter H from 25 up to 60 ¹⁾ 8 bar at 20°C for diameter H = 70 and 90
Thermal endurance	80°C, optionally: 100°C
Ambient temperature	90°C
Turn-down ratio	1:10
Accuracy class	1.6 to VDI/VDE 3513
Connection RA 65	two-part pipe union: insert with cylindrical internal thread to ISO 7-
Connection FA 65	Flanges PN 10 to DIN 2501, others (ANSI, JIS, ...) on request

¹⁾ Diameter H according to Dimension Tables for FA65 and RA65

10.1. Materials

Heads RA 65	Grey cast iron, size 9.5 steel
Threaded joint	Malleable cast iron, galvanized
Flanges FA 65	Grey cast iron, size 9.5 steel
Measuring glass	Borosilicate glass (Duran)
splinter shield	Plexiglas XT
Gaskets	Standard: NBR; optionally: Viton, EPDM, silicone
Floats for liquids ¹⁾	Standard: 1.4571 (stainless steel); optionally: PVC, PP, PVDF or PTFE with lead core
Floats for gases ¹⁾	Standard: aluminium; optionally: PVC, PP, PTFE, PVDF or 1.4571 (stainless steel)
Limit contacts ¹⁾	1.4571 (stainless steel) with magnetic core (liquids) PVC with magnetic core (gases)

¹⁾ Floats up to size 19 are nonguided; size 30 and larger: with guided float. Optionally,




RA 65 / FA 65

10.2. Dimensions

RA 65					
Size	Pipe union	S	L	d ¹⁾	H
9.5	Rp 1/4	28	308	12	25
	Rp 3/8	32	310	16	
	Rp 1/2	39	312	20	
19	Rp 1/2	39	413	20	45
	Rp 3/4	48	420	25	
	Rp 1	55	424	32	
30	Rp 1	55	424	32	60
	Rp 1 1/4	67	428	40	
	Rp 1 1/2	74	430	50	
36	Rp 1 1/4	67	428	40	70
	Rp 1 1/2	74	430	50	
	Rp 2	90	445	63	
43	Rp 1 1/2	74	430	50	90
	Rp 2	90	445	63	
	Rp 2 1/2	111	446	75	
	Rp 3	131	450	90	


¹⁾ d for bonding and welding sleeve

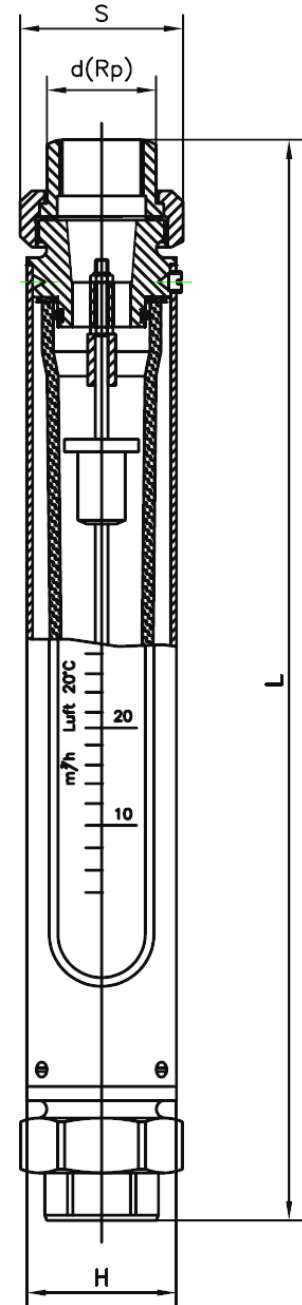



RA 65 / FA 65

FA 65								
DN	L	H	D	d4	k	Qty	Bolts Thread	d2
10	260	25	90	40	60	4	M 12	14
15			95	45	65	4	M 12	14
10	360	45	90	40	60	4	M 12	M 12
15			95	45	65	4	M 12	14
20			105	58	75	4	M 12	14
25			115	68	85	4	M 12	14
20	360	60	105	58	75	4	M 12	M 12
25			115	68	85	4	M 12	14
40			150	88	110	4	M 16	18
25	360	70	115	68	85	4	M 12	M 12
40			150	88	110	4	M 16	18
50			165	102	125	4	M 16	18
50	360	90	165	102	125	4	M 16	18
65			185	122	145	4	M 16	18

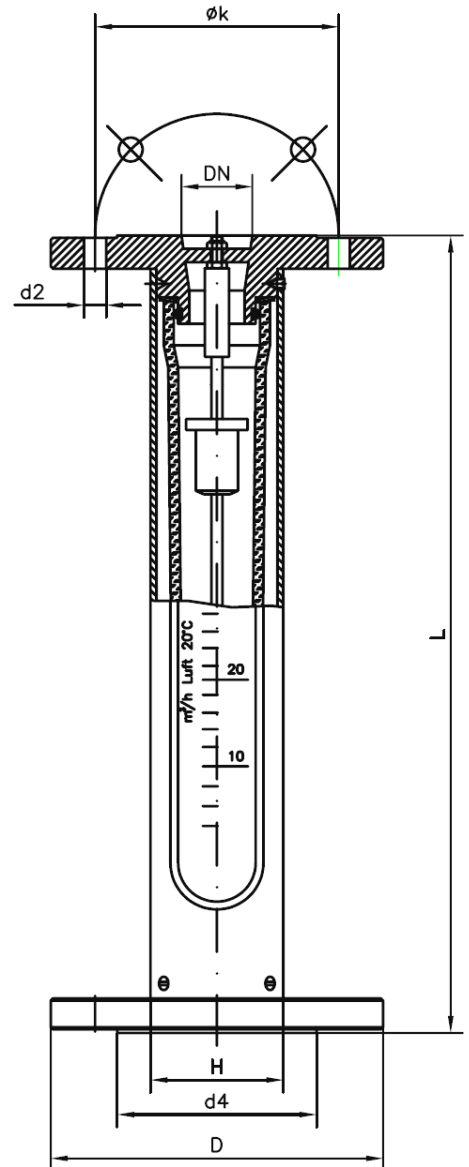



10.3. Technical data of limit contacts

Ausführung	MSK-1	MSK-12
Voltage switched	50VAC/75VDC	50VAC/75VDC
Current switched	0,5A	0,5A
Contact rating	10W/VA	10W/VA
Dielectric strength	230VAC/400VDC	230VAC/400VDC
Temperature range	-20 bis +90°C	-20 bis +90°C
Switching function	normally closed contact	normally open contact
Ausführung	MSK-W	
Voltage switched	50VAC/75VDC	
Current switched	0,5A	
Contact rating	5W/VA	
Dielectric strength	110VAC/200VDC	
Temperature range	-20 bis +90°C	
Switching function	change over contact	

¹⁾ The deciding factor is the thermal endurance of the flow meter!
 Connection via right angle plug (number of contacts 3 +PE) according to
 DIN 46350 Form A and cable gland M16 (IP65)

10.3.1. Low-Voltage Directive

Above 50 V AC/75 V DC, contacts are subject to the EU Low-Voltage Directive.
 The user is required to verify their use accordingly.



The equipment from Kirchner und Tochter has been tested in compliance with the applicable CE-regulations of the European Community. The respective declaration of conformity is available on request. The Kirchner und Tochter QM-System will be certified in accordance with DIN-EN-ISO 9001:2000. The quality is systematically adapted to the increasing demands.



Kirchner und Tochter