

Sprinkler measuring orifice

SMB



Assembly and operating instructions

Sprinkler measuring orifice

SMB/SMB-OE



Kirchner und Tochter


A. Kirchner & Tochter GmbH Dieselstraße 17 · D-47228 Duisburg
Fon: +49 2065 9609-0 · Fax: +49 2065 9609-22 Internet: www.kt-web.de · e-mail: info@kt-web.de

Version 2.1



Table of contents

1 General	1
1.1 Preface	1
1.2 Exclusion of liability	1
2 Safety	1
2.1 General safety information	1
2.2 Proper use	2
2.3 Explanation of pictographs and signs	2
2.4 Information on safety for owner and operators	2
2.5 Regulations and guidelines	2
2.6 VdS approval	2
3 Transport and storage	2
4 Description	3
4.1 Application	3
4.2 Design and function	3
4.3 Peculiarity SMB-OE	3
4.4 Installation variants	4
5 Installation	5
5.1 Preparation for installation	5
5.2 Installation of the orifice ring	5
5.3 Installation of the dial gauge	6
6 Commissioning	7
6.1 Zero point adjustment	7
6.2 Initial startup	7
7 Maintenance	8
8 Service	8
9 Disposal	8
10 Technical data	9
10.1 General technical data	9
10.2 Models	9
10.3 Measuring range	9
10.4 Inlet and outlet sections	10
10.5 Dimensions	11
10.6 Installation kits	12
11 Spare parts	13



1. General

1.1 Preface

These assembly and operating instructions apply to sprinkler measuring orifices, type SMB with a display of m^3/min and to the SMB-OE with percentage display.

All information contained in these operating instructions on assembly, operation, repairs and maintenance have to be observed and adhered to. The operating instructions form an integral part of the sprinkler measuring orifice; they have to be kept at a suitable location in the vicinity of the place of application and must be accessible for the operators. In case of interaction of different plant components, the operating instructions of those also have to be observed.


1.2 Exclusion of liability

Kirchner und Tochter will not accept any liability for damage or disruptions caused by operating errors, non-observance of these assembly and operating instructions, inexpert execution of assembly and repair work or by the improper use of the sprinkler measuring orifice.

2. Safety

2.1 General safety information

These assembly and operating instructions contain important information to be observed on the assembly, the operation, on repairs and maintenance of the sprinkler measuring orifice. Each person charged with the assembly, the operation, repairs and maintenance must have read and understood these operation instructions. Non-observance of these assembly and operating instructions, or inexpertly conducted assembly and repair work may result in disruptions of the sprinkler system. As a consequence, man or animal may be at risk or material assets may be damaged. Hazards by electric energy or released media energy must be prevented.



2.2 Proper use

The VdS approval of the sprinkler measuring orifice is valid for the flow measurement of water. Installation in pipework may be effected only between two flanges (intermediate flange assembly).

Select the sprinkler measuring orifice model in accordance with the pipe cross-section at the location of application for the sprinkler measuring orifice.

The limit values of the sprinkler measuring orifice are to be observed as prescribed in chapter „Technical data“. Rebuilding or other modifications of the measuring device may be effected by Kirchner und Tochter only.

2.3 Explanation of pictographs and signs



Pictograph on work safety

This pictograph can be found at all hints on work safety in these assembly and operating instructions pointing out hazards for life and limb of persons. Further, this pictograph highlights safety hints in these operating instructions that point to regulations, guidelines or operating sequences that must be observed without fail. Non-observance may result in damages to or a destruction of the measuring orifice and / or other parts of the installation.

2.4 Safety information for the owner and the operators

The personnel charged with the assembly, the operation, repairs and maintenance must be qualified to fulfill the respective tasks and must have been trained and instructed with regards to the task in question.

2.5 Regulations and guidelines

Apart from the information contained in these assembly and operating instructions, the regulations, guidelines and standards such as DIN EN, as well as the DVGW and VdS guidelines in case of branch-oriented applications must be observed; the same is true for the regulations on the prevention of accidents valid in the destination country.

2.6 VdS approval


The sprinkler measuring orifice has been approved by the VdS. During the installation, operation, repairs and maintenance, the VdS guidelines have to be adhered to.

3. Transport and storage

At the factory, the sprinkler measuring orifice was suitably packed for transport and storage. Transport and storage should be effected while in the original packing only.



The measuring device is to be protected against shocks and blows!



SMB

4. Description

4.1 Field of application

The sprinkler measuring orifice SMB is a measuring device employed to measure the flow rate in pipework of stationary sprinkler systems.

4.2 Design and function

Due to physical reasons, different pressure potentials are found on both sides of the orifice (5). This differential pressure acts quadratic proportional to the volume flow inside the pipework (4).

The scaling (1) of the dial gauge (3) is realized in volume flow units (m^3/min). The dial gauge displays the present volume flow inside the pipe via the position of the hand (2).


4.3 Peculiarity SMB-OE

All information contained in these assembly and operating instructions are also valid for the measuring device SMB-OE.



A peculiarity of the sprinkler measuring orifice SMB-OE is the fact that the scaling of the scale reading plate has been subdivided in percent.

A label on the dial gauge serves to read the effective flow values in m^3/min for the individual nominal cross-section of the pipe.

This permits the combination of the dial gauge with all nominal cross-sections of the SMB-OE.

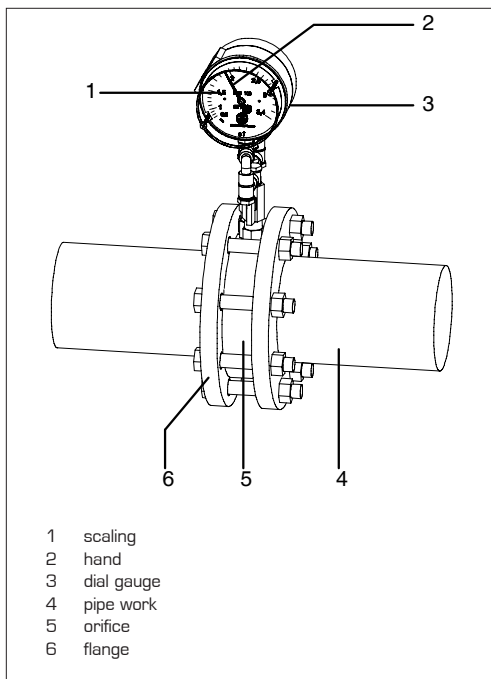


III. 1

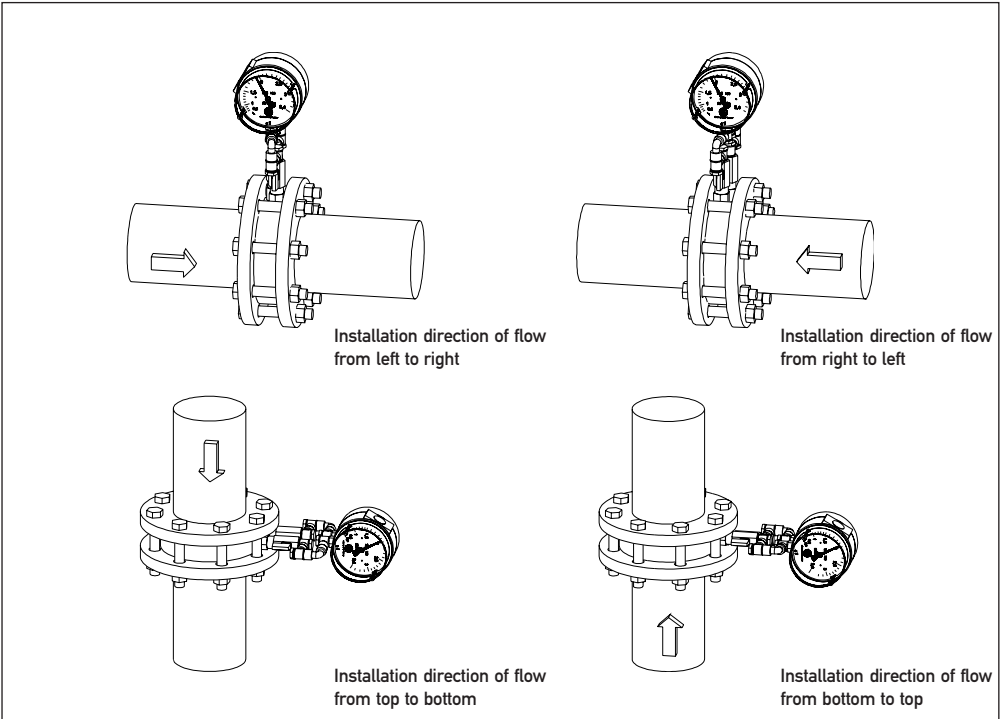

Ill. 2

4.4 Installation variants

Thanks to the special articulated design, the dial gauge of the sprinkler measuring orifice pivots by 180 degrees in both directions. Therefore, an assembly in various installation positions is possible (refer to illustration 2).




5. Installation



Installation may be effected by trained personnel only!

5.1 Preparation for installation

- Verify the local conditions and the direction of flow inside the pipework at the place of installation of the sprinkler measuring orifice.
- Make sure that the sprinkler measuring orifice is suitable for installation at the planned location with regards to nominal cross-section, min. inlet and outlet distance, maximum working pressure and medium (also refer to chapter 10).
- Shut off and secure the pipework in accordance with regulations and empty the circuit.
- Lay out the installation kit for the delivered measuring orifice (refer to chapter 10.6).

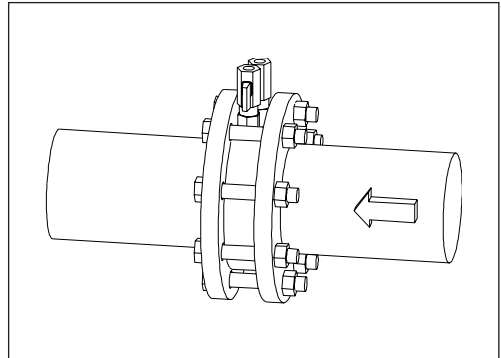

III. 3

5.2 Installation of the orifice ring



For an intermediate flange installation of the sprinkler measuring orifice, two flanges PN 16 have to be installed in accordance with DIN EN 1092-1 and the VdS guidelines. The flange distance required for installation is 40 mm with an additional 2 mm each for both flange seals.

Pre-assemble the flanged connection in such a way as to permit the insertion of the measuring orifice with its seals from the front (vertical piping) or from above (horizontal piping), respectively.

Together with the seals attached on both sides, place the measuring orifice between both prepared flanges and slide same all the way against the pre-assembled screws.

This serves to center orifice and seal. The seals have to be in true alignment with the entire circumference of the measuring orifice.



The flow direction has to coincide with the hand on the measuring orifice.

Insert the remaining screws and uniformly tighten all screwed connections crosswise.

Note

The best measuring accuracy is obtained with smooth inside pipe joints and pipe configurations in accordance with the VdS guidelines.

5.3 Installation of the dial gauge

Remove the shipping protection plugs (1, ill. 4) from the threads of the dial gauge and the screwed connections of the measuring orifice. The sealing rings (9) required during assembly have been attached to the dial gauge with cable binders.

Use screws (4 and 7) to fix the dial gauge with its inserted sealing rings (9) to the ball valves of the measuring orifice. In the process, connect the plus line of the dial gauge with the plus line of the measuring orifice and minus line of the dial gauge with the minus line of the measuring orifice. Observe the respective markings at the dial gauge and on the table of measuring orifice.

Position the dial gauge in such a way, as to permit an unimpeded reading of the display.


Tighten the fixing screws (4 to 7) with a torque of 15 Nm.




In order to prevent leaks, the joining pieces (1 and 2) should not be tightened with a torque.

When tightening the screwed connections (4 and 7) immobilize the joining pieces (1 and 2) with a wrench.


Next follow the steps in chapter 6 „Commissioning“.

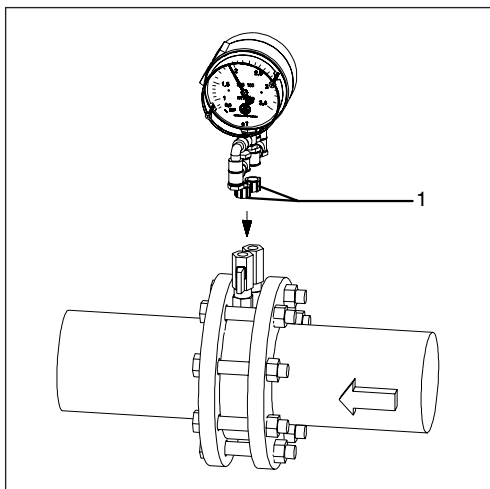

III. 4

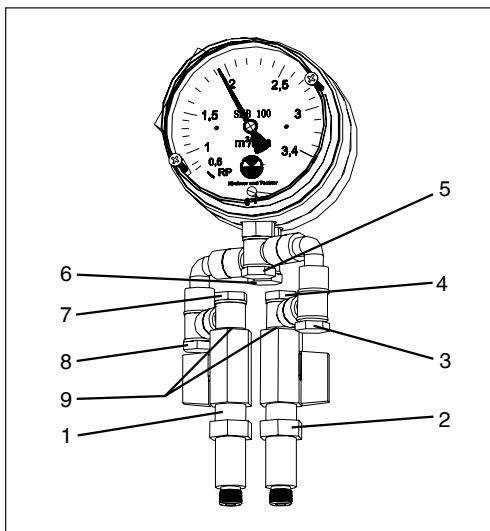

III. 5



6. Commissioning

6.1 Zero-point adjustment

In case the hand of the dial gauge is not within the range of the rest position marked RP with the flow cut off, the sprinkler measuring orifice has to be readjusted as follows:

- Detach the screws (3) from the dial gauge
- Remove the translucent cover lid
- With the zero-point adjustment screw (4) adjust the hand to the center of the rest position (ill. 6)
- Put cover lid back on
- Insert screws and tighten same


6.2 Initial startup




The correct installation is a prerequisite for commissioning.

The following steps have to be followed for the initial startup:


- Close ball valves (1 and 2)
- Put conduit under pressure
- Simultaneously open the ball valves (1 and 2)
- Check tightness of all components of the sprinkler measuring orifice.

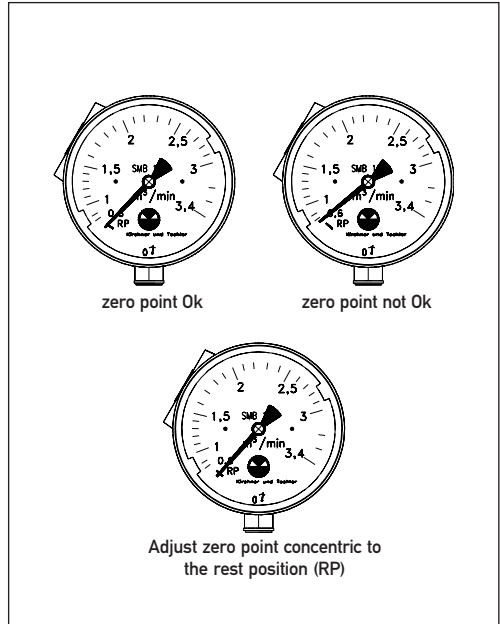

III. 6

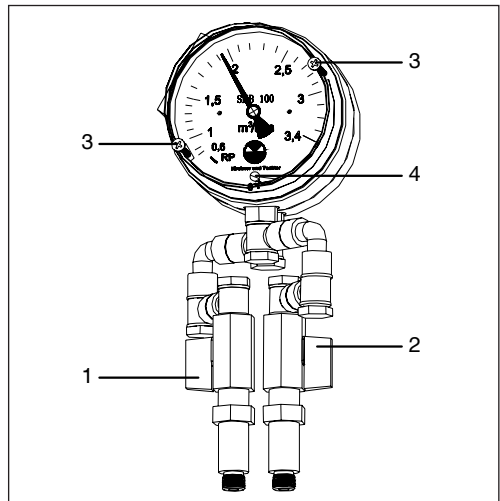

III. 7



7. Maintenance

The sprinkler measuring orifice is maintenance-free. In order to warrant a reliable operation and a long service life of the device, we recommend regular checks of the device, such as:

- check of the display
- remove deposits inside the nozzles of the banjo bolts
- check of the joints between orifice ring and dial gauge


The exact checking cycles are determined by the VdS regulations and are to be adjusted depending on the operating and surrounding conditions.

8. Service

All defective or faulty devices are to be returned directly to our repair shop. In order to process complaints of our customers as quickly as possible, kindly contact our Sales Department tel. no. +49 (0) 2065-96090 before returning any parts.

9. Disposal

For a better environment. Please help us protect our environment by disposing of the parts used in accordance with the relevant legislation or by recycling same.



10. Technical data

10.1 General technical data

VdS approval	G 4990049
Measuring principle	Differential pressure metering at orifice
Materials:	
Orifice	hard-coated aluminum
Screwed connections	nickel-plated brass, 1.4308
Ball valves	nickel-plated brass
Dial gauge	Aluminum
Scale	in m³/min or % at SMB-OE
Measuring accuracy	2.5% FS
max. working pressure	16 bar
Installation	intermediate flange installation in accordance with the VdS guidelines

10.2 Models

The SMB is available in five different nominal cross-sections. The approved measuring range of the SMB is at least 1:5. The SMB attains an accuracy of 2.5% at the approved full-scale range and an accuracy of 5% at the approved measuring range start value.


10.3 Measuring range

Measuring range SMB


Model	For pipes with inner diameter of [mm] / [DN]	Approved measuring range [m³/min]	Max. deviation from the full-scale range [m³/min] [%]
SMB 80	83.1 / 80	0,6 - 2.1	±0.0525 ±2.5
SMB 100	107.9 / 100	1 - 3.4	±0.085 ±2.5
SMB 150	160.3 / 150	2 - 7.25	±0.18125 ±2.5
SMB 200	210.1 / 200	4 - 12.35	±0.30875 ±2.5
SMB 250	264.0 / 250	4 - 18.12	±0.453 ±2.5

Measuring range SMB-OE

DN80	DN100	DN150	DN200	DN250
Indication	Indication	Indication	Indication	Indication
% m³/min	% m³/min	% m³/min	% m³/min	% m³/min
100,00 2,10	100,00 3,40	100,00 7,25	100,00 12,35	100,00 18,12
90,00 1,89	90,00 3,06	90,00 6,53	90,00 11,12	90,00 16,31
80,00 1,68	80,00 2,72	80,00 5,80	80,00 9,88	80,00 14,50
70,00 1,47	70,00 2,38	70,00 5,08	70,00 8,65	70,00 12,68
60,00 1,26	60,00 2,04	60,00 4,35	60,00 7,41	60,00 10,87
50,00 1,05	50,00 1,70	50,00 3,63	50,00 6,18	50,00 9,06
40,00 0,84	40,00 1,36	40,00 2,90	40,00 4,94	40,00 7,25
30,00 0,63	30,00 1,02	30,00 2,18	30,00 3,71	30,00 5,44
28,57 0,60	29,41 1,00	27,59 2,00	32,39 4,00	22,08 4,00



10.4 Inlet and outlet paths

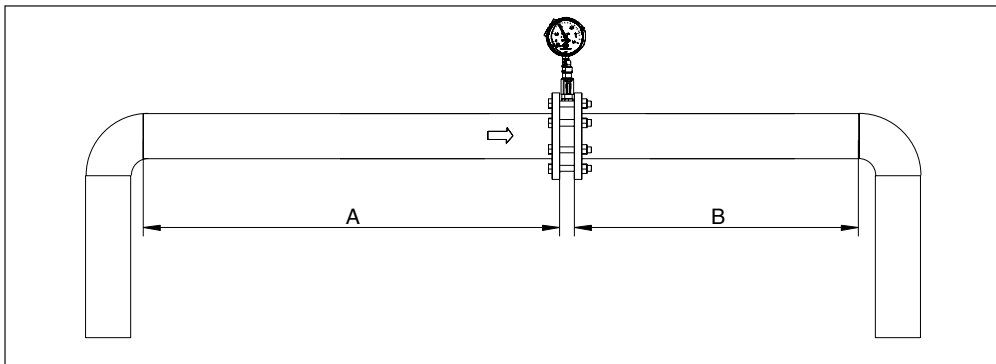


III. 8


The optimum accuracy is obtained, if the pipe configuration conforms to the VdS guidelines. The following inlet and outlet sections that must not contain any valves, knees, elbows, changes in cross-section or similar, apply to the various SMB models.

When using pumps creating fluctuations in the volume flow (possible with centrifugal pumps driven by a diesel engine), we recommend to extend the inlet section from 10 d to 18 d.

Model	Min. inlet path A [mm]	Min. outlet path B [mm]
SMB 80	800	400
SMB 100	1000	500
SMB 150	1500	750
SMB 200	2000	1000
SMB 250	2500	1250




10.5 Dimensions

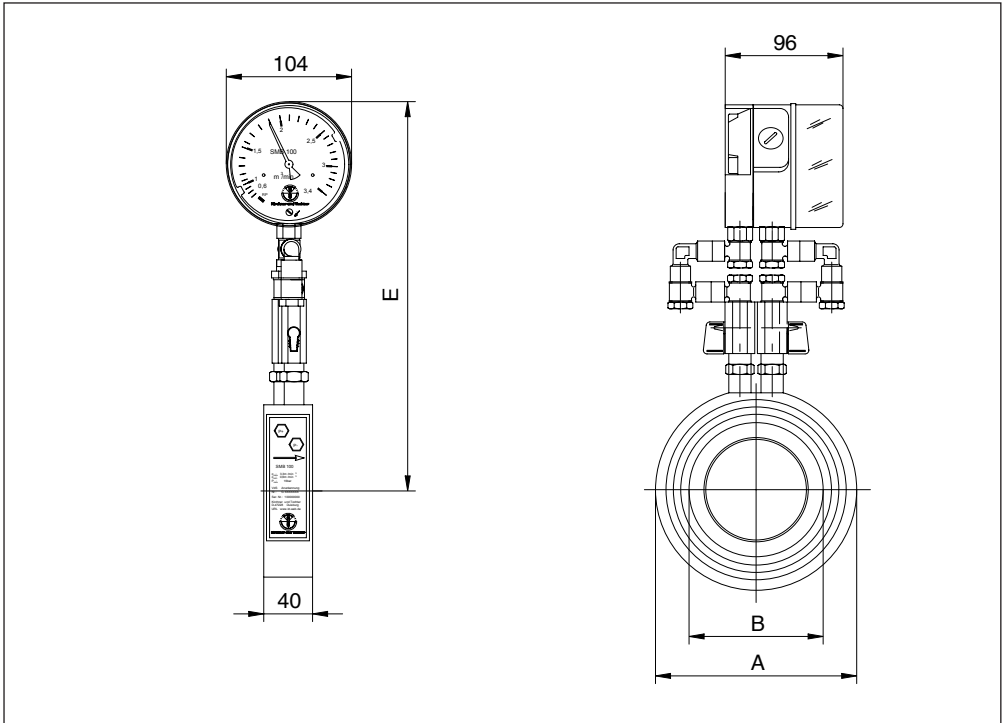

Ill. 9


Model	A [mm]	B [mm]	E [mm]
SMB 80	144	84.1	311
SMB 100	164	108.9	321
SMB 150	220	161.8	349
SMB 200	275	211.8	377
SMB 250	331	264.5	406




10.6 Installation kits

SMB installation kit	Quantity	Designator
DN 80	8	hexagon bolt DIN 933 - M16 x 110 - 8.8 galvanized
	8	nut DIN 934 - M16 - 8
	8	washer DIN 125 - 17 - A2
	2	seals ¹⁾ Ø 133 x Ø 86 x 2
DN 100	8	hexagon bolt DIN 933 - M16 x 110 - 8.8 galvanized
	8	nut DIN 934 - M 16 - 8
	8	washer DIN 125 - 17 - A2
	2	seals ¹⁾ Ø 162 x Ø 109 x 2
DN 150	8	hexagon bolt DIN 933 - M20 x 110 - 8.8 galvanized
	8	nut DIN 934 - M20 - 8
	8	washer DIN 125 - 21 - A2
	2	seals ¹⁾ Ø 211 x Ø 162 x 2
DN 200	12	hexagon bolt DIN 933 - M20 x 110 - 8.8 galvanized
	12	nut DIN 934 - M20 - 8
	12	washer DIN 125 - 21 - A2
	2	seals ¹⁾ Ø 265 x Ø 223 x 2
DN 250	12	hexagon bolt DIN 933 - M24 x 110 - 8.8 galvanized
	12	nut DIN 934 - M24 - 8
	12	washer DIN 125 - 25 - A2
	2	seals ¹⁾ Ø 328 x Ø 274 x 2

¹⁾ Use rubber seals or water-resistant seals.



11. Spare parts

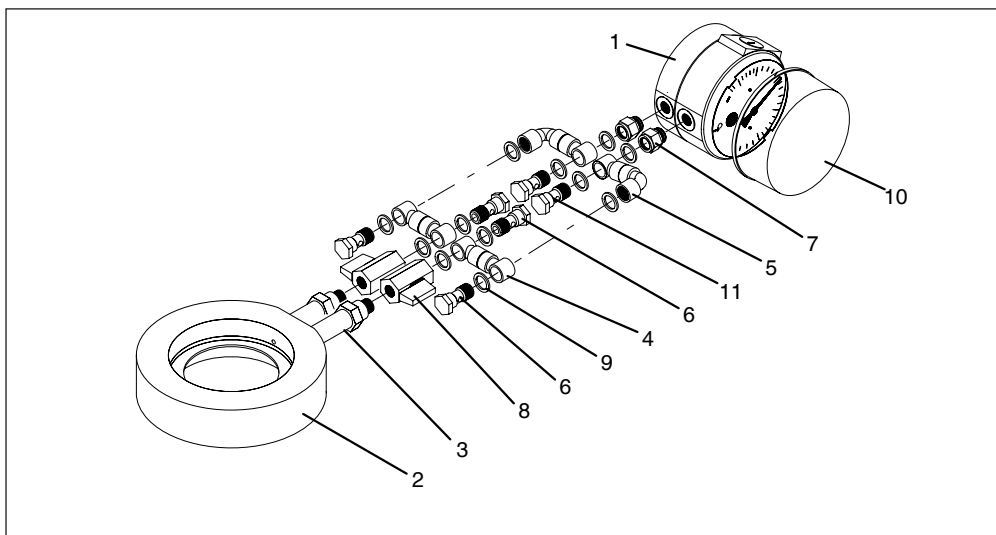


Bill of parts

Pos.	Qty.	Designator	Material
1	1	Dial gauge	Al
2	1	Measuring orifice	hard-coated Al
3	2	Joining piece	CuZn nickel-plated
4	2	Straight joint	1.4308
5	2	L-type joint	1.4308
6	4	Screw	CuZn nickel-plated
7	2	Double-threaded nipple	CuZn nickel-plated
8	2	Ball valve	CuZn nickel-plated
9	12	Sealing ring	CuZn nickel-plated/NBR
10	1	Clear-view cover	Perspex
11	2	Screw with damping insert	CuZn nickel-plated
12	1	Assembly and operating instructions	-

Spare parts' list

- A) 1 orifice with joining pieces (Pos. 2, 3, 8, 9)
B) 1 set pre-assembled fittings (Pos. 4, 5, 6, 9, 11)
C) 1 dial gauge (Pos. 1, 7, 10)
D) 1 set of sealing rings (Pos 9)



The equipment from Kirchner und Tochter has been tested in compliance with the applicable CE-regulations of the European Community.

The respective declaration of conformity is available on request. The Kirchner und Tochter QM-System will be certified in accordance with DIN-EN-ISO 9001:2000. The quality is systematically adapted to the increasing demands.



Kirchner und Tochter